

User Guide

Thank you for choosing GEECOO smart phone ,For additional phone contents, Please visit www.geecoomobile.com ;This user guide is published by GEECOO Technology (Italy) Limited ,All rights are reserved ! We hope this product will bring you a new brand experience !

Taking care of your device

Your device is a product of superior design& craftsmanship and should be handled with care: the following recommendations will help to protect your Phone:

- Keep the device dry. Precipitation, humidity, and all types of liquid or moisture may contain minerals that can rust electronic circuits. If your device gets wet, avoid turning on device.
 Wipe it with a dry cloth and take it to the service center.
- Do not keep device under extreme temperatures; it can damage the battery and shorten device life span.
- Do not use or keep device in dusty and dirty areas; the electronic components may be damaged.
- 4. Do not attempt to open device in any way other than instructed in this guide. Repairs attempted by an entity other than designated service agent /center will void warranty.

CAUTION:

- 1. Use careful with the earphone maybe excessive sound pressure from earphone and headphones can cause hearing loss.
- Risk of explosion if battery is replaced by an incorrect type .Dispose of used battery according to the local laws and regulations.
- The product shall only be connected to a USB interface of version USB 2.0.
- 4. Adapter shall be installed near the equipment and be easily accessible.
- EUT Temperature:-10°C~+40°C.
- 6. Adapter: The plug is considered as disconnecting device.
- The device complies with RF specifications when the device used at 0.5cm from your body.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Tampering with mobile ROOT voids warranty and may cause software instability.

Battery & charger safety

- Do not place battery in fire, explosion may occur. With concern for the environment, please abide local laws& ordinances in battery disposal.
- Only use GEECOO original battery, charger, and accessories applicable to the specific mobile model. Failure to do so voids the warranty and may result in a hazard.
- Power off mobile prior to testing its charging. If charger malfunctions, off-mode will prevent to damage the circuit board.
- 4. Please keep the charging mobile away from small children.
- Do not touch charger or mo bile with wet hands; if's hazardous and may damage electronic parts.






Warning

Use only GEECOO-approved battery specifically designed for your phone. Incompatible battery can cause serious injuries or damage your phone.


Never place battery or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Battery may explode when overheated

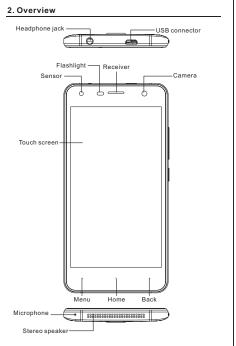

Getting to know the phone

When you first turn on your phone ,you'll see a GEECOO Logo, Choose the language you want and touch the arrow to continue. Notice:

 To complete the set up process, It's best to have a Wi-Fi connection 2.Operation system of this product only supports the software updated by GEECOO Officially system

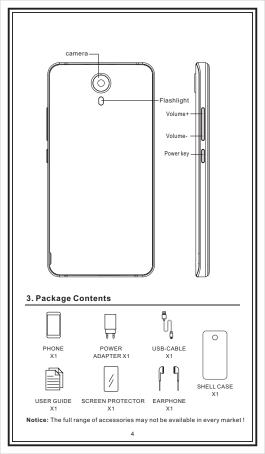


4. SIM/SD card installation


Refer to the following picture for SIM/SD card installation. Please switch off the device before inserting or removing SIM card and Micro SD card

Notice :

1.This Mobile the Nona-SIM 2 and Micro SD share one slot , this slot is compatible with 2 card but can not be inserted simultaneously

2.Any exception please long -press power key 10 seconds your phone will restart !

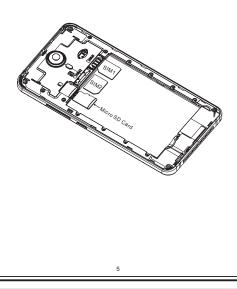

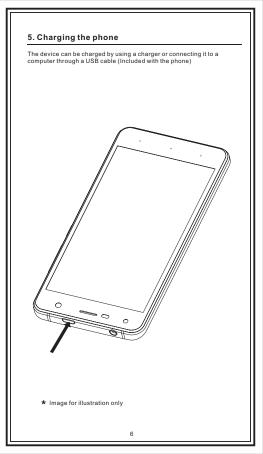

6. Specifications

(1) Basic parameters:

Display:	5.0" HD 1280*720 Resolution &2.5D Curved Screen
Color: Operating system:	Sky Black/Blue Coral/ Maple Leaf Gold / Bright Moon Silver Android ¹ 7 7.0
Processor:	Spreadturm SC9832, ARM Cortex®-A7™×4, 1.3 Ghz
Network:	GSM/WCDMA/LTE
Bands:	GSM:850/900/1800/1900
	WCDMA: 900/2100
	LTE Band:1/3/7/8/20
	LTE Band: 1/3/5; TDD:B40 (Optional)
GPU:	ARM Mali-t400 mp1 @550MHz
RAM:	1GB RAM
ROM:	8GB ROM(Expandable up to 32GB)
Battery:	2500mAh Li-Polymer Battery

2 Camera:

8.0 MP AF back camera

F/2.2 aperture Dual LED flashlights HDR Anti-shake

2.0MP front camera Auto beautify mode 77.5° wide angle lens Selfie countdown

Face recognition

③ Connection(I/O):

USB :	Micro 5 Pin Charge
Earphone :	3.5 Samsung Earphone Slot
SIM CARD Slot:	Dual SIM
Memory :	Expandable Micro SD, Up to 32 GB

④ Other Features:

VIDEO: MP4, 3GP, MOV, MKV, AV, FLV, MPEG Audio: FLAC, APE, AAC, MKA, OGG, MIDI, M4A, AMR Image: JPEG, PNG, GIF, BMP

⑤ Dimensions:

Height:143 mm Width:71mm Thickness: 6.5mm

7. Factory data reset

"Factory data reset" resets all configurations to their default state. Internal mobile storage is cleared of all date including Apps, This procedure may take a long time. Please wait patiently for mobile to restart and do not power off.

Notice :

1. Factory data reset as a last resort. Once activated all user data & configurations are deleted and cannot be restored.

2. For more information or if you have any questions about using this guide, Contact with Technical@geecoomobile.com !

Android, Google, Google Play and other Marks are Trademarks of Google Inc



Manufacture By : ShenZhen Geecoo Intelligence Co.,Ltd 2104/05,Cyber Times Tower Main Bldg, Tianan Cyber Park, CheGongMiao, ShaTou St, Futian District, ShenZhen City, GuangDong Province, China



Designed by GCCCCO Made in China